White PVC Demo Counter (Code: PPCD-190-CGW)

Easy Set Up Instruction

(Please read before set up)

http://www.prints-mart.com

Remarks:

1. Please read all pages before set up.
2. Please ask one more friend to help if possible.
3. Please pull all hardware and graphic panels out of the transport case slightly and slowly.

Hardware includes:

A) Top/Base Units (larger pieces) x 2 pcs

B) Middle Shelf Unit (smaller piece) x 1 pcs

C) Bottom Panel (Graphic Wrap) x 1 pcs

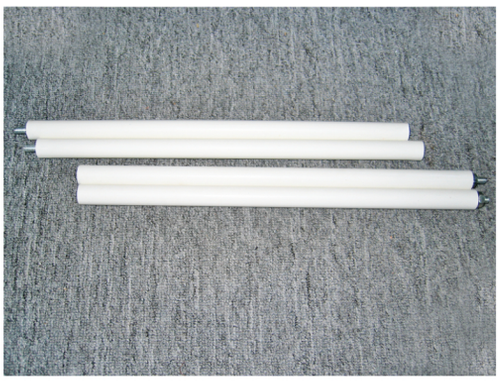

D) Shelf Unit Supporting Poles (shorter poles) x 4 pcs

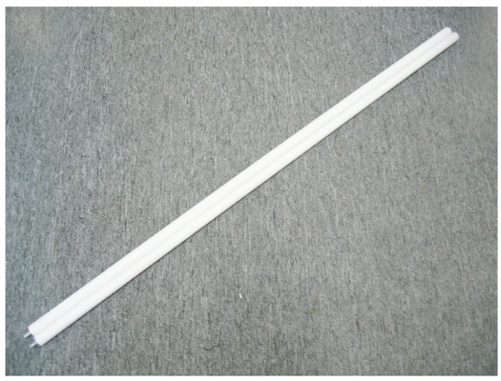

E) Header Panel Supporting Poles (longer pole) x 2 pcs

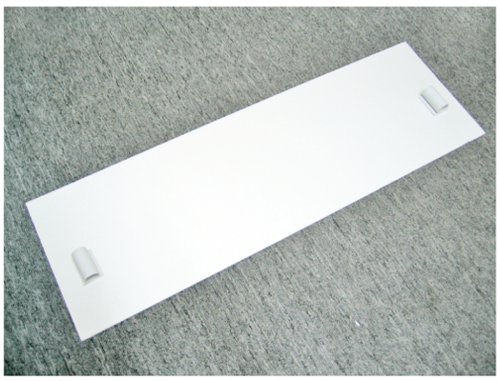

F) Header Panel x 1 pcs

Alpine Global (Group) Limited
www.alpine-global.com

Prints-mart
Digital Printing · Trade Show Displays · Offset Printing

- Website: www.prints-mart.com
- (Any Enquiry or Quote) E-mail: order@prints-mart.com
- Tel: (852)3168-6995 ▪ Fax: (852)3741-7896
- Address: Unit 1305 Hang Wai Industrial Ctr. Blk B 6 Kin Tai St. Tuen Mun, N.T. Hong Kong

White PVC Demo Counter (Code: PPCD-190-CGW)

Easy Set Up Instruction

(Please read before set up)

http://www.prints-mart.com

Step 1 : Remove the components from the nylon. carrying bag.

Step 2 : Take one A)Top/Base Unit (the larger piece) as the base unit. Place on the floor with the raw edge facing upwards.

Step 3 : Slot the two D) Shelf Unit Supporting Pole (the shorter pole with screw at the end) into the holes of the bottom unit.

Step 4 : The base unit with two shelf unit supporting poles facing up on the floor.

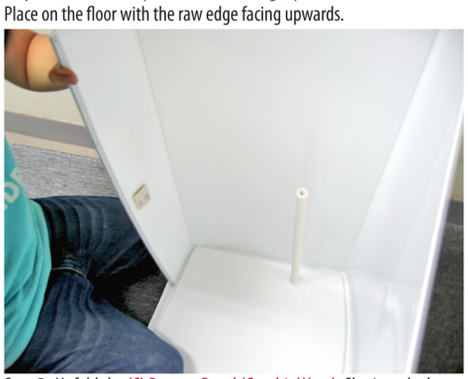

Step 5 : Unfold the (C) Bottom Panel (Graphic Wrap). Slot into the base unit opening on the shorter edge of the base unit.

Step 6 : Slot the other side as well.

Step 7 : Take the B) Middle Shelf Unit (smaller piece). Slide down through the top of the graphic panel (wrap). Slot the other 2 D) Shelf Unit Supporting Pole (shorter pole with no screws) into the holes of the middle shelf unit.

Step 8 : Take the 2nd A) Top/Base Unit (the larger piece). Slot over the wrap.

Step 9 : Slot the 1st E) Header Panel Supporting Pole (longer pole) through the hole of the top unit.

Step 10 : Slot the 2nd E) Header Panel Supporting Pole (longer pole) through the other hole of the top unit as well.

Step 11 : Attach the F) Header Panel to the top of the header supporting poles.

Finish! Ready to go!

Alpine Global (Group) Limited
www.alpine-global.com

Prints-mart
Digital Printing · Trade Show Displays · Offset Printing

- Website: www.prints-mart.com
- (Any Enquiry or Quote) E-mail: order@prints-mart.com
- Tel: (852)3168-6995 ▪ Fax: (852)3741-7896
- Address: Unit 1305 Hang Wai Industrial Ctr. Blk B 6 Kin Tai St. Tuen Mun, N.T. Hong Kong