

## Budget Demo Counter (Code: APCD-185-SG)

### Easy Set Up Instruction

(Please read before set up)



<http://www.prints-mart.com>




**Step 1:** Remove the components from the carrying bag.




**Step 2:** Unfold the aluminum frame and positioning it so the sides are at 90 degree angles to the front.



**Step 3:** Attach the wooden shelf to the middle inside of the frame. Hooks on the shelf connect to the support rails as shown above.

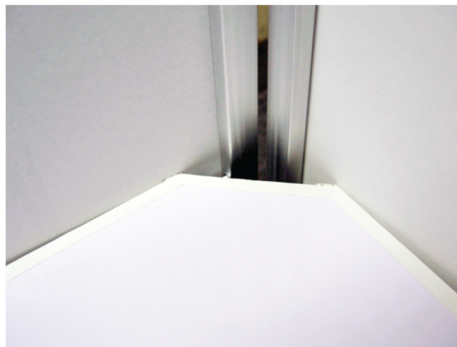

**Step 4:** After the shelf is installed, rest the wooden countertop on top of the aluminum frame. There are 6 holes under the wooden countertop to accommodate the countertop and the frame. Make sure the two holes on the countertop for connecting the poles are close to you. See picture as shown above.

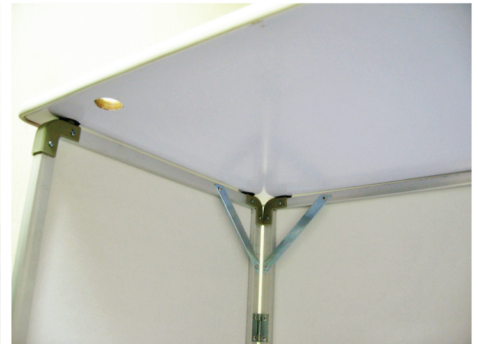

**Step 5:** Insert the two plastic circle rings into the two holes of the countertop completely. Insert each pole into the hole of each plastic ring from the countertop. Attach the header to the top of the poles. The counter is ready!

